

HOST LINKS

G&R ***PTHRU***™

***Terminal
Gateway
to the
Bull Primary
Network***

<http://www.gar.no/hostlinks/>



Microsoft, Windows, MS, MS-DOS are registered trademarks of Microsoft Corp.
IBM and PC are registered trademarks of IBM Corp.
UNIX is a registered trademark in the United States and other
countries, licensed exclusively through X/Open Company, Ltd.

Any other product names are trademarks of their respective owners.

Version 6.3
© Gallagher & Robertson as 1990-2005
All Rights Reserved

GALLAGHER & ROBERTSON AS, Kongens gate 23, N- 0153 Oslo, Norway
Tel: +47 23357800 • Fax: +47 23357801
www: <http://www.gar.no/>
e-mail: support@gar.no

Contents

Host Links Pthru	1
Installation.....	1
Scope of the product.....	2
Functionality	2
Network connections.....	2
Integration	3
Run-time licenses	4
Pthru service messages	5
Using DSA	5
Using TNVIP	9
Pthru Function keys	11
Printing	13
Hard copy	13
Host print output.....	13
Gspool.....	13
Emulator print	14
File transfer	15
Unified File Transfer.....	15
Kermit and MML	15
Commands	17
Command overview	17
Command interface	17
Commands in detail.....	18
Command shell (\$*\$!)	18
Change context (\$*\$#)	18
Call the directory manager (\$*\$\$)	19
Send a break to the host application (\$*\$B).....	19
Disconnect from host application (\$*\$D)	20
Execute UNIX/Linux command (\$*\$E)	20
Call the Host Links Help facility (\$*\$H).....	21
Quit, leave the gateway (\$*\$Q)	21
Set parameter (\$*\$S).....	21

National character sets	23
Internal character set	23
Using 8-bit terminals.....	23
Using 7-bit terminals.....	23
Mainframe character set	23
National 7-bit character sets.....	23
8-bit character sets	23
Startup/Configuration	25
Terminal types.....	25
User terminal.....	25
Mainframe terminal.....	25
Command line	26
Configuration file (<product>.cfg).....	26
Using Ggate.....	28
Using TNVIP	28
Pthru parameters.....	29
Host Links user profiles	30
Profiles file structure.....	30
Line handler parameters	32
Line parameters for DSA	32
Line parameters for TCP/IP	32
Terminal line parameters.....	33
Troubleshooting	35
Product trace files.....	35
Line handler trace files.....	35
When connecting through Ggate	36
The TTY line handler	36
Appendix: Host Links Manuals	37
Appendix: Host Links License Keys	39
Glicense.....	39
License keys	41




Appendix: Host Links DSA Utilities	43
Gconame	43
Gerror	44
Glnode.....	44
Gmacfix.....	44
Gping	45
Grnode	45
Gtrace.....	45
Gtsupd.....	46
Appendix: Host Links Trace.....	47
Trace activation	47
Trace types	47
Structure	48
Tracing Ggate.....	49
Examples - G&R products	49
CPI-C and Gweb trace files.....	51
Appendix: Error codes	53
OSI/DSA error codes	53
Windows Sockets error Codes	65



Host Links Pthru

Installation

The G&R emulations and gateways are independent programs, but part of the *G&R Host Links* product set available on all major UNIX/Linux platforms. Many of the products are also available for Windows servers. For details on platforms supported, software delivery and installation refer to the *Host Links Installation and Configuration* manual.

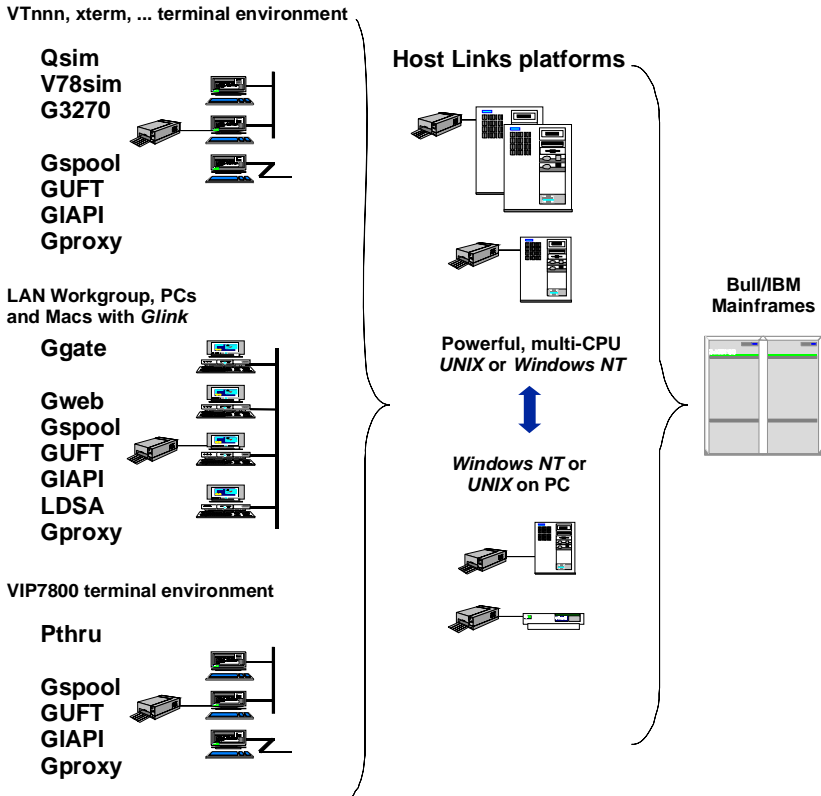

Scope of the product

Functionality

G&R/Pthru provides transparent VIP7800 visibility to Bull mainframes for users with asynchronous VIP7800 terminals or emulators connected to a UNIX or Linux system. The terminals are used in text or forms mode. Pthru transforms the system into what appears to the mainframe as a synchronous VIP7800 terminal cluster. Pthru is not available for Windows. PC users with our *G&R/Glink* terminal emulator can also connect to Bull mainframes using Pthru, but it is more efficient for a *Glink* user to connect via *G&R/Ggate*. *Glink* users can also connect to Bull mainframes as VIP77xx, DKUxxxx or IBMxxxx terminal types, and Pthru will select the appropriate emulation mode in *Glink* when started, but again, these connections can be made more efficiently using *G&R/Ggate*.

Network connections

DSA connections can be made in the traditional way using OSI-transport, which is a requirement when connecting via old-style Datanets. The Bull systems can be accessed over an X.25 WAN or Ethernet LAN through a Datanet or MainWay front-end. Alternatively access can be direct to GCOS6 using a LAN adapter or direct to GCOS7 using ISL. Access can be by an FDDI LAN direct to GCOS7 using FCP7 or direct to GCOS8 using FCP8 (both support OSI-transport).

DSA connections can also be made over a TCP/IP network, using the Internet standard RFC1006 transport protocol to replace OSI-transport. MainWay front-ends with an ONP (Open Network Processor) have RFC1006 support in the standard product, allowing DSA sessions over TCP/IP into the MainWay. RFC1006 can also be installed in the FCP7 and FCP8 cards to support DSA connections direct to the mainframes without passing through the front-end. The GNSP of newer GCOS8 systems, and the Open System personality of GCOS7 Diane systems both support RFC1006 connections.

The *G&R/Ggate* product off-loads the DSA session protocol into gateways. By running Ggate on the system(s) with the mainframe connections the emulator platforms need only the very small and efficient Ggate protocol layer to connect over TCP/IP to a Ggate gateway with full native Bull network functionality. Ggate can make the mainframe connection using OSI-transport or RFC1006. If you must use OSI-transport for the mainframe connection, using Ggate will limit the need for OSI-stacks to the Ggate platforms.

The *Host Links Installation and Configuration* manuals cover the OSI stack installation and setup for the supported UNIX and Windows server systems.

Bull systems can also be accessed using Telnet VIP (TNVIP). The TNVIP servers in the MainWay, the Bull DPX/20, GCOS8 GNSP, the Open Systems personalities of GCOS7 Diane systems and *G&R/Ggate* are all qualified. However, RFC1006 will increase throughput as compared to using TNVIP. It will also give a real, fully functional DSA or DIWS session over the TCP/IP network, as compared to the limited terminal session offered by TNVIP.

Integration

Pthru allows you to execute local UNIX/Linux commands or the command shell, and you can switch to other *Host Links* products, all while keeping one or more mainframe sessions alive. This includes the Interactive Help System that has all the information available in this manual. System administrators may easily customize the menus provided.

In order to provide a command interface to the Pthru program itself, to the *Host Links* facilities and to UNIX/Linux services a command syntax is implemented in the familiar form of `$$command`. However, when running a host application it may be difficult to issue these commands, so the `-F12` parameter may be used to make F12 a command key, and issue the `$$` prompt in the status line. Users with VIP7800 terminals will find this convenient. For users with *G&R/Glink* a background script is provided to monitor the LF (GREY -) key, and give an interface.

Run-time licenses

In order to run Pthru, the following license keys must be present in your `/usr/gar/config/licenses` file:

basic	For the base G&R run-time system
pthru	For Pthru

The licenses file identifies the G&R distributor, the owner of the license and the licensed products. The license key for a product will normally state how many simultaneous sessions the product is licensed for. If a limitation is specified in the license, only the licensed number of sessions can be active at any time.

Pthru service messages

A connect command (F12 C when using the -F12 parameter) causes Pthru to make a connection request using the parameters set in the configuration file. However you may do your own connect by entering a connect command string;

Using DSA

The line handler accepts service messages for connect $\$*\CN , disconnect $\$*\DIS , break $\$*\BRK (attention, and possibly purge undelivered data, depending on configuration of the mainframe, and/or application), the two attention signals $\$*\$A1$ (attention type 1), $\$*\$A2$ (attention type 2) and identification query $\$*\ID from the communications product using the handler. You can type them and transmit when using an emulator or concentrator. Unknown service messages (messages beginning with $\$*\$$ but where the 2-3 following characters are not recognized) will cause an error message.

Interpretation of service messages within the message text can be disabled (-DSD OFF as an emulation parameter) so that they are transmitted as data to the mainframe. The emulators all have command keys for issuing service messages that may be used instead of typing $\$*\$$ if interpretation is disabled.

User applications using one of our communications APIs from the *GLAPI* library must send service messages themselves when the *Gline API* is used, but they will be sent automatically by *CMALLC*, *CMDEAL* and *CMSERR* when one of our *CPI-C APIs* is used.

The connect command

3 different `$$CN` formats can be used:

Using a predefined CONAME from `dsa.cfg` to connect:

```
$$CN coname
```

If the name given is not a predefined CONAME, it is assumed to be the application name and the connect will be carried out using the parameters set for the DSA session (i.e. explicitly by parameter setting from command line and/or the configuration file)

Using the traditional G&R positional `$$CN` format:

GCOS8 connect to 'appl' (application)

```
$$CN appl,node[,str,password,person,project,billing]
```

GCOS7 connect to 'appl' (application)

```
$$CN userid,project,billing,appl,password,node[, ,str]
```

Using the Terminal-Manager keyword connect format:

```
$$CN -scid NODE -dmb APPL -ext . . .
```

The following key words can be used:

```
-dmb, -ext, -scid, -lmb, -str, -usr, -ba, -pj, -pw, -mdmp
```

A GCOS8 connect normally requires only application and node, but you may need to specify a GRTS ID or LID depending on Datanet configuration. This is supplied as `-str`. You will need `password`, `person`, `project` if the target site has the 'Secure Workstation Environment', or is using the IDCHECK package developed by Bull Norway for securing networks.

A GCOS7 connect normally requires you to set all of the documented parameters. The string (`-str`) is used by GCOS7 to set application options. These are:

IOF:

<code>![NS] [NM] [NEW]</code>	e.g. <code>-str " !NM NEW"</code>
<code>\$station-name</code>	e.g. <code>-str " !NM NEW \$STA1"</code>
<code>*environment</code>	e.g. <code>-str " !NM NEW \$STA1 *ENV1"</code>

Note that when using multiple space-separated options they must be enclosed in quotes.

NS	No Startup, user specific information suppressed
NM	No Mail, user messages suppressed
NEW	New session, previous interrupted session lost
station name	station for JOR and SYSOUT
environment	IOF user context for session

TDS

?<option>[%string OR <length><system-header>]

e.g. -str ?B40D25
 -str ?A%JIM

option	A: system messages and edited mode B: system messages and unedited mode C: no system messages and edited mode D: no system messages and unedited mode.
string	8 alphanumeric characters to be input to the first TPR of the LOGON transaction
header	service message header in the form of an alphanumeric prefix or a control code

Note that you can set the default values for the connect commands with parameters in the configuration file, but that if no default is configured then the last value used for this particular field becomes the default. So if you make an error in one of the parameters you need not specify the others in your next connect.

If you set all connect parameters in the configuration file you can connect from most of the *Host Links* products using a single key connect command, or by transmitting \$* $\$$ CN.

Connecting to GCOS8 CXI applications

You must use -HM CXI if you log in to GCOS8 via CXI. When you log in the endpoint (at least for TP8) is:

node/mailbox/mailbox extension

When you define a LID in TP8 one of the parameters is mailbox extension, usually set to be equal to the LID. In the connect ($\$*\CN) the first parameter (mailbox name) can be specified as follows:

```
 $\$*\$CN$  XXXXXX YYYY,node
```

XXXXX the TP8 mailbox

YYYY the extension for your LID

When the remote mailbox string contains 8 characters you must follow the mailbox string with the mailbox extension string without a space separator.

Alternatively the remote mailbox is configurable as default application ($-DA$) and in the same way the extension is configurable as default extension ($-DX$).

The disconnect command

All systems accept:

```
 $\$*\$DIS$ 
```

force disconnection (normally done by application).

The break commands

```
 $\$*\$BRK$ 
```

sends attention type 1, against turn if necessary. The host, and/or application session may be configured to purge undelivered data when a break is sent.

The default configuration for break is:

GCOS8 Attention and purge

GCOS7 Attention only

DNS Attention only

For DSA300 applications (CXI applications such as TP8) an option 'data attention' may be negotiated. For these applications a data attention is used instead of attention when transmitting a break.

```
 $\$*\$A1$ 
```

sends attention type 1 as for break, but never purges undelivered data.

```
*$A2
```

sends attention type 2, no purge.

The identification inquiry

```
*$ID
```

returns the local DSA session control name, the local mailbox name and the terminal type used e.g.

```
$$DIWS: Your ID is: SC:EN3D MB:D24701 TM:DKU7107
```

Using TNVIP

The TNVIP handler (`-li tcp -am tnvip`) handles `*$CN`, `*$BRK` and `*$DIS`, but the connect format is different.

The only information required is the IP address in symbolic or numeric format and the port number if it is not the standard Telnet port e.g.

```
*$CN hostname:portnumber
```



Pthru Function keys

The function keys on the synchronous and asynchronous versions of the VIP7800 family are defined as sending a control sequence to the host. This sequence is sent transparently through Pthru, and will be interpreted by the host application, as for directly connected terminals. Consult the VIP7800 or *G&R/Glink* reference manual for the control sequences generated, and the possibilities for modifying them, or other keyboard sequences.

Despite the wish for transparency, there is still a need to give commands to the UNIX/Linux operating system. A command interface is implemented using the $\$*\$$ syntax familiar from dialogue with the Datanet. If the `-F12` parameter is used F12 will act as a prompt for the $\$*\$$ command sequence. Pressing F12 again causes the F12 sequence to be transmitted. Pressing any other `F-KEY` will cancel the prompt. Otherwise the commands may be entered as documented in the *commands* section on page 17.



Printing

Hard copy

Host Links has a generic hard copy function in the video interface, but this is not available in the Pthru product because all presentation is being done by the VIP7800 terminal or by *G&R/Glink* on the PC.

Host print output

Gspool

As a print output station the *Host Links* mainframe print spooler *G&R/Gspool* is recommended. Gspool is designed to run as an unattended process and accept transparent print output from any type of mainframe application (GCOS8, GCOS7, GCOS6, IBM) that normally sends print data to network printers. On the Gspool system the print may be directed to a physical printer or to a file for spooling.

For all IBM print Gspool supports unformatted and formatted print (LU type 1 and 3) and SNA Character String (SCS) codes directed to an IBM3287 printer.

In IBM mode Gspool supports printers configured in a Bull front-end with the OSF SNA gateway (Janus). The front-end has the Gspool node and mailbox name configured as the location of the printer. Gspool waits for the connect request from the front-end.

In TN3270 mode Gspool supports printers via a TN3270/SNA gateway as specified in RFC1646. In TN3270E mode Gspool supports TN3270E print as specified in RFC1647 via a TN3270E/SNA gateway. It can be configured as a generic printer or associated printer through the use of TCP line handler parameters `-LU` and `-AP`. Microsoft's MS SNA Server (MS Windows NT), Bull's TN3270E server in MainWay and Bull's SNA/20 (AIX 4.1) are examples of SNA gateways that support RFC1647.

In SNM mode Gspool supports network printers configured in the SNM (GCOS6 Secondary network manager). When started with the 'no connect' option (`-CN of f`), Gspool will wait for the connect request from SNM.

In GCOS8 or GCOS7 mode Gspool supports network printers configured in TP, TDS or Twriter. For Twriter Gspool waits for the connect from GCOS7.

In DPF8-DS mode (`-DPF8`) Gspool supports the 'DPF8-Distributed SYSOUT' ('DPF8-DS') product on GCOS8. In this mode Gspool starts two TCP/IP line handlers and waits for remote connect requests from DPF8-DS.

For more information about *Gspool* see the Gspool manual.

Emulator print

For occasional print output to the user terminal the emulators handle print from the mainframe. The print may be sent within the terminal session, or the mainframe may send to a separate print session that is associated with the terminal session using the merged print feature.

If the mainframe addresses the printer on the terminal using VIP7800 print control sequences embedded in the data, then these are passed transparently to the terminal, and will cause the print to be done on the attached printer.

If the mainframe addresses a separate print session, but you want this print session to be associated with the attached printer on your terminal, then you must configure the attached printer session in your `dsa.cfg`, and use the `-PCO` parameter. Please refer to the *Gline manual* for details of configuring a separate printer session.

File transfer

Unified File Transfer

Host Links has an implementation of the Bull Unified File Transfer (UFT) facility for transferring large quantities of data between the GCOS and local file systems. *G&R/Guft* is available both as a server and a client. The server version accepts incoming file transfer requests initiated from TSS or IOF on the Bull mainframes. You can use the client version to initiate transfers from your UNIX or Linux workstation.

Kermit and MML

While in interactive dialog with GCOS you can use the G&R implementation of the GCOS 'Kermit' (FTRAN, GKRM or other Kermit versions).

On GCOS8, use the TSS command `FTRA PC7800`, or start the GKRM system. On GCOS7, use the MICROFIT command `FTRAN MICROSYS`, but you must log in through the MICROFIT system. In both cases the emulator recognizes the FTRA start-up.

If you have an ordinary terminal, or if you set parameter `-GK ON`, then the emulator will ask direction and mode, then start *G&R/Gkerm* (the *Host Links* Kermit, which is FTRA compatible). The file will be transferred between the mainframe and the local file system.

If your terminal is a PC with *G&R/Glink*, then the default action is to enter pass-through-mode and allow *Glink* to deal with the FTRA. The *Glink* Kermit window pops up, and you will be allowed to select direction and ASCII/Binary. The file will be transferred direct between the mainframe and your PC. In case of error, pass-through-mode can be terminated by transmit of a null block and the FTRA can then be terminated with a break (LF B).



Commands

Command overview

You can type the following commands immediately after a `$$$` sequence to perform a Pthru command function. You can type the `$$$` or obtain it as a prompt from F12. For *Glink* users a user-friendly interface for sending these commands while using a host application is provided by the *Glink* script `PTHRU.SCR`, which if executing in the background will be activated by the LF (GRAY -) key, to give a pop-up menu of commands available.

```
l(9)set count for command
! start the command shell (on gateway, UNIX)
# change context (1-9)      (followed by count)
$ directory administrator
B send break to the host
C connect to host
D disconnect from host
E execute command          (followed by the command)
H call help facility
Q exit Pthru concentrator
S set Pthru parameter
```

Command interface

Pthru examines all messages from the terminal that begin with `$$$` to see if they are Pthru commands, but if not they will be delivered to the Gline interface rather than rejected as they may be Gline commands. Typing a `$$$` command sequence may be impossible while running a host application so Pthru allows F12 to be configured as a prompt key (-F12 parameter), and the status line is used to collect the command. For *Glink* users a background script is available that collects commands locally through pop-up menus, and transmits them without affecting the host screen image.

During execution of commands that use the terminal the screen image has to be saved and restored on return to Pthru. For Glink users the image is saved on the PC to save network traffic. For terminal users the image is saved in the UNIX/Linux file system:

```
/usr/gar/pthru_sv/$logname/pthru.cxn
```

the `n` in `.cxn` is the context number where Pthru is running. Directory `pthru_sv` should exist, and the users should have directory create permission.

Commands in detail

Command shell (\$*\$!)

If you are working within the *Host Links* systems and are an advanced user, a UNIX/Linux specialist or the system administrator you might find it convenient to start a command line shell in order to work with UNIX/Linux commands for a period, without losing your *Host Links* context. Thus you can maintain several host connections or other activities while you temporarily work at command level.

```
F12 !XMIT          --> start a command line shell
```

This may be inhibited in your `profiles` file (NOEXEC).

Change context (\$*\$#)

The *Host Links* multi-context feature is a set of utilities for allowing user friendly access to the UNIX/Linux multitasking capability such that a user may have several facilities in use at the same time and jump between them as desired without terminating or restarting. For example, you can start several copies of Pthru, each of them logged on to different host applications and then switch between these applications as desired.

Each facility started by the *Host Links* multi-context feature is defined as an active context. If you have installed this software, then the `$*$#` command allows you to jump directly to another active context.

A context number (1-9) is assigned to each active context. You set the desired context number by using a repetition count:

```
$*$#      --> switch to context menu
$*$# 1    --> switch to context 1
$*$# 9    --> switch to context 9
```

or with -F12 parameter:

```
F12 #      --> switch to context menu
F12 # 1    --> switch to context 1
F12 # 9    --> switch to context 9
```

Call the directory manager (\$*\$)

The *G&R/Gdir* file manager is a fully compatible interactive menu driven replacement for standard file commands in UNIX/Linux. It provides facilities for navigating in the directory structure and for creating and releasing files.

It also has a facility for activating the alphanumeric keyboard with user-oriented functions that can then be executed with a single keystroke. These functions may contain any command, and the name of the file or directory being pointed to with the cursor in the file display is available as a parameter to the commands.

The file manager is integrated with a configurable editor and print system, so the file pointed at may be read in to an editor or printed.

For a detailed explanation, enter the manager and type LF H.

G&R/Gdir is bundled with all *Host Links* products. *G&R/Gdir* may be inhibited in your *profiles* file (NODOLLAR).

Send a break to the host application (\$*\$B)

Several of the host systems you may access have situations where they keep the initiative in a dialogue, and if you want to regain it you are required to transmit a break signal. Please do not confuse this function with the BREAK key on your asynchronous terminal.

Because the host has the initiative, your keyboard may be locked for normal typing, unless inhibited with `-LK off`. However if running *Glink* script `PTHRU.SCR` you may send a break to the host with `LF B`, which will normally cause the host to give you the initiative.

You may of course unlock the keyboard manually. You can then use the command `*$B` by typing normally or using `F12` for the `*$` prompt. You can send a break by typing:

```
*$BRK <TRANSMIT>
```

Disconnect from host application (\$*SD)

Disconnect from a mainframe application by entering the log-off sequence required by the host and transmitting. The mainframe will close the current session and a 'Disconnected' message will appear on your screen.

If this log-off procedure for some reason fails, you can send a session disconnect request to the mainframe by entering the *Pthru* command `*$D` by typing normally or `F12` prompt. Normally you will then receive a disconnect confirmation message. You may also type manually:

```
*$DIS <TRANSMIT>
```

Execute UNIX/Linux command (\$*\$E)

This command allows you to execute a UNIX/Linux command without exiting from *Host Links*. The following variations are available:

```

*$E      command  --> show command, execute, wait for CR
*$E      *command --> cursor to 1/24, execute, don't wait
*$E      **command --> same as the above
*$E      ***command --> execute command, no refresh
*$E      ****command --> execute command, refresh screen

```

All save and restore the screen except the 3 asterisk mode, which does not restore afterwards; so data written by the application to the screen is still there when *Pthru* regains control. Use four asterisks when starting *Host Links* or other full screen products that begin by blanking or otherwise initializing the screen.

This may be inhibited in your profiles file (NOEXEC).

Call the Host Links Help facility (\$*\$H)

This calls the *G&R/Gmenu* facility, which is an independent system that executes outside of the products. The menu facility navigates in a series of menus and/or information pages, and most *Host Links* products have a set of help menus that may be consulted using the system. Your own applications may also use it. Menus and information pages may be added or changed by the user or system administrator.

The G&R *Gmail* reference manual describes how to maintain the menus and information pages. *G&R/Gmenu* is bundled with all *Host Links* products.

Quit, leave the gateway (\$*\$Q)

This command is used to terminate Pthru. The host log-off sequence should be sent and a disconnect confirmation received before entering this command. However, if you leave Pthru with an active session, the network software will do an abnormal disconnect to close it.

Set parameter (\$*\$S)

You can set parameters when you start Pthru, or afterwards by using the \$*\$S syntax, typed manually, or from the F12 prompt. The following format should be used:

```
-XX parameter1 -YY parameter2
```

If a parameter is for the line handler module the -LI argument should precede the actual parameter:

```
-LI DSA -XX parameter
```

For an overview of the parameters available see the Pthru configuration menu.

This may be inhibited in your profiles file (NOPARAM).



National character sets

Internal character set

When you use the Pthru the gateway machine will not involve itself in national character transliteration. Characters will be sent to the host exactly as they are received from the VIP7800 terminal or emulator.

Using 8-bit terminals

Only the VIP8800 is regarded as an 8-bit terminal by the mainframes.

Using 7-bit terminals

The VIP7800 models are all regarded as 7-bit by the mainframes.

Mainframe character set

National 7-bit character sets

The mainframe to which you connect may use a national 7-bit set. If you use a national 7-bit VIP7800 terminal or character set within Glink then both representations of national characters use the same 7-bit equivalents (square and curly brackets etc.).

8-bit character sets

All of the GCOS mainframes (GCOS6, GCOS7, GCOS8) have 8-bit capability in the sense that characters can be stored as 8-bit bytes, but the communications software involved often undermines this capability. The front-end software or the mainframe terminal-handling package may not recognize the terminal as having an 8-bit capability, and may cut off the top bit.

The standard VIP terminal types are defined as 7-bit. There is an encoding (SI/SO) for 8-bit, but this is not supported by the mainframes. There is a VIP8800 terminal type that is defined as 8-bit, and this must be used when connecting to 8-bit mainframes. The communications software may support it.

G&R native 8-bit connections

The G&R DSA/DIWS interfaces, and G&R/Ggate provide an 8-bit connection to GCOS mainframes.

If your mainframe is a GCOS7 system it only supports 8-bit ASCII sessions for VIP8800. If your GCOS7 system is a Diane, then you can use the 8-bit terminal types and associated 8bit printer type specially defined for G&R to Diane communication. These were defined for GCOS 7 TS 9910 and need the following co-requisite patches:

Q1606.02, Q1607.03, Q1608.04, Q1609.02

Additionally the definition of the new models must be appended in the H_TERM sub-file of the SYS.HSLLIB library as follows:

```
DEFLIKE EXTYPE=VIP9800,LIKE=HDS7,DSAMODEL=20A3,CSETTYPE=9
DEFLIKE EXTYPE=PRT9220,LIKE=PRT1220,DSAMODEL=20A4,CSETTYPE=9
```

Startup/Configuration

Terminal types

User terminal

The type of terminal being used to run Pthru is taken from the Host Links configuration of the user. The Host Links terminal type is taken from the UNIX/Linux `TERM` variable. If the `TERM` variable cannot be set correctly, the Host Links terminal type can be overridden using the `VIDEO` directive in the Host Links `PROFILES` file, see below. Pthru supports only two terminal types, real VIP7800 asynchronous terminals (or standard emulations of it) and *G&R/Glink*. Choosing a `TERM` name that starts with `VIP` indicates a real VIP7800 terminal and restricts the command set that Pthru uses to control it. Choosing a `TERM` name that starts with `GLINK` allows Pthru to use the extended command set supported by *G&R/Glink*.

Mainframe terminal

The default mainframe terminal type is set to `VIP7804`. This can be changed using the `-TM` parameter to the line handler, see the section entitled *Line handler parameters*. Users with a real VIP terminal must choose the appropriate VIP as the mainframe terminal type. Glink users can choose any VIP7800 terminal type as necessary for the mainframe application.

For Glink only, you can specify the mainframe terminal type as a `VIP77xx`, `DKUxxxx` or `IBMxxxx` assuming the mainframe connection supports the terminal type. This will cause Pthru to switch Glink into the appropriate emulation mode.

Command line

An example command line:

```
pthru -F12 -LI DSA -HM DPS7
```

Parameters for the G&R emulators and gateways are divided into two categories, parameters for the product itself and parameters for the line handler. Parameters for the product must precede the `-LI` argument that signals that the rest of the parameters are for the line handler module.

The `-USER` and `-HOST` parameters may later be used to switch between product and line parameters. Parameters may be pre-configured on:

```
/usr/gar/config/$LOGNAME/<product>.cfg
```

The user (`$LOGNAME`) directory may be replaced with `default` to give a configuration for users with no private directory.

Configuration file (<product>.cfg)

The configuration file is grouped into sections.

Default	Parameters apply to all users
User user(.acct.mode)	Parameters apply to this user only
Terminal terminal-name	Parameters apply to this terminal only
TermUser terminal user	Parameters apply to this combination only
ContextUser ctx user	Parameters apply to user in this context

The 'User' identifier may be in the standard star format, or the `.acct.mode` part can be omitted altogether. Comment lines are denoted by an asterisk or hash (`*`, `#`) in column 1, and may appear anywhere in the file. A section header must appear before the first parameter, but sections may be in any order. Both section headers and parameters can be indented for clarity. The file is processed sequentially and subsequent parameters will override any previous parameters of the same type.

Parameters for the product must be preceded by `-USER` if any line parameters have been delivered previously, e.g. in the `Default` section. Line parameters must always be preceded by `-LI XXX`.

In the following there are line parameters in the `Default` section, so the parameters in the user sections must be preceded with `-USER`, and the user's line parameters must be preceded with `-LI XXX` again.

e.g. `/usr/gar/config/default/pthru.cfg`

```
Default
-LI DSA -D? OURGCOS6
User Peter
-LI DSA -HM DPS7 -DA IOF -DN P7 -D? SECRET
-DP DEVELOP
User Mary
-USER -F12-HOST -DA TSS -DN PROD8 -HM DPS8
```

A user with a private configuration file would only have directives associated with his/her sessions. For a user with a private file the default file is not read or used.

Line parameters that are associated with the host rather than with the user can be configured in the `dsa.cfg` file. See section entitled *Line handler parameters*.

Using Ggate

```
-LI DSA or -LI DIWS
```

When using DSA or DIWS the line handler and the DSA-stack run on the same system. The G&R emulators and gateways also support the *G&R/Ggate* protocol and may access the Bull or IBM mainframe through a *G&R/Ggate* system. In this case there is no need for a DSA stack on the system running the emulator. The emulator can use the *Ggate* protocol on top of TCP/IP to communicate with *Ggate*, and *Ggate* will run the DSA or DIWS line handlers on top of the transport software on its own system. In this case the emulator startup commands would use:

```
-LI DSA:gars.gar.no (DSA)
-LI DIWS:192.150.211.4 (DIWS)
```

Note that both the symbolic and numeric IP-address formats are supported. See the *Ggate* manual for more information about *Ggate*.

Using TNVIP

The G&R Bull emulators and gateways can connect over a TCP/IP network using the TNVIP protocol to reach a TNVIP server in the MainWay, the GNSP of newer GCOS8 systems, the Open Systems personality of GCOS7 Diane systems or the Bull TNVIP server on AIX.

```
-li tcp -am tnvip
```

The TNVIP server on AIX uses a non-standard port, normally 7323, and requires parameter `-rp 7323`, or the port can be specified in the default node parameter together with the IP address of the server.

```
-li tcp -am tnvip -dn 192.150.211.4:7323
```

You can use the numeric IP-address directly or you can use a symbolic name to identify the host. In the latter case this symbolic name must be registered in your hosts file or with your name server. You can enter the port number directly or use a symbolic name for it. In the latter case this symbolic name must be registered in your services file.

The MainWay TNVIP server normally uses the default port (23), but may need the `-res` parameter to deliver a mailbox name to the server. This is used to select a specific terminal configuration.

We have implemented the TNVIP client protocol in the interest of completing our connectivity offer. Please note however that DSA over RFC1006 is supported by all MainWay front-ends with an ONP (Open Network Processor), by the GNSP front-end of newer GCOS8 systems, and by the Open Systems personality of the GCOS7 Diane systems. If used when communicating with G&R products DSA over RFC1006 will increase throughput as compared to using TNVIP. It will also give a real, fully functional DSA session over the TCP/IP network, as compared to the limited terminal session offered by TNVIP.

Pthru parameters

This is an overview of the parameters for normal usage.

Parameter	Description
<code>-AI</code> <code>rgb kiu</code>	Information message attributes. Default green. Use either a combination of <code>rgb</code> for a colour or one of <code>kiu</code> for blink, inverse, underline.
<code>-AW</code> <code>rgb kiu</code>	Attribute for warning messages, default red.
<code>-CN</code> <code>on/OFF</code>	Connect automatically to host application (defined by line handler parameters) at startup.
<code>-DBG</code> <code>on/OFF</code>	Turns on an internal trace.
<code>-DQ</code> <code>on/OFF</code>	Disconnect causes Pthru to quit, normal disconnect gives a return code of zero, abnormal disconnect gives a return code equal to the return code from the line. Pthru also quits on failing connection attempts with a nonzero return code.
<code>-E8</code> <code>on/OFF</code>	Exchange eight bit bytes with the terminal and the mainframe line handler. The default is to ignore the top bit.

Parameter	Description
-EC on/OFF	As for -E8.
-F12 on/OFF	Treat F12 as command prompt. F12 F12 transmits F12. F12 followed by any F-KEY cancels the prompt.
-LK ON/off	Lock keyboard on transmit and unlock on 'turn'.
-MSG ON/off	Display Pthru and line handler messages.
-PT ON/off	Map transparent print addressing in the VIP header to in-line print start- and stop-sequences.
-PW 10	Wait time in seconds before Pthru will deliver accumulated print for spooling. A value of zero stops automatic spooling.

Host Links user profiles

Pthru does not use the Host Links Gvideo interface to handle the screen, but uses the Host Links terminal type to differentiate between real VIP7800 terminals and *G&R/GLINK*. The correct terminal type is also needed for other Host Links products and utilities. You should set the TERM environment variable to inform Host Links of your terminal type. Any TERM variable starting with VIP will select the handler for the VIP7801 (BDS 7) terminal, and VIPUNIX tells the handler that the terminal is in 'Character Attribute Mode'. A TERM starting with GLINK will enable the *G&R/Glink* extensions. GLINKVIP leaves Glink in VIP78 mode when executing other UNIX/Linux products. This is the recommended way of running UNIX/Linux with Glink. If the TERM variable cannot be set correctly it may be overridden with the VIDEO directive in the PROFILES file.

Profiles file structure

User profiles are maintained by the *Host Links* administrator.

```
/usr/gar/config/default/profiles
/usr/gar/config/$LOGNAME/profiles
/usr/gar/config/system/profiles
```

These files are read one by one in the sequence given above. Suggested commands should be given in `config/default/profiles`, user specific commands in `config/$LOGNAME/profiles` and finally the administrator may use the `config/system/profiles` to override all other settings.

All files are organized in sections, which may apply either to all terminals (Default), a group of users (User), specific terminals (Terminal), a combination (Termuser), or specific terminal types (Termttype). Each section is prefaced with a header line:

```
DEFAULT
USER      person.project.mode
TERMINAL  terminal_name
TERMUSER  terminal_name person.project.mode
TERMTYPE  terminal_type
```

Commands may be put into any section to specify the *Host Links* environment for a user or terminal.

Please refer to the *Host Links Installation and Configuration Guide*.

Line handler parameters

All line handler parameters are described in the *G&R/Gline* manual.

Line parameters for DSA

-LI DSA/DIWS	Use Bull DSA or DIWS
-LL line length	For applications that send large blocks
-HM DPS8/DPS7/CXI/DPS6	DPS8 is the default
-MN mailbox name	Local mailbox name of terminal
-TM VIP7804	Terminal type for connect letter
-DA application	Default application TSS, TDS, IOF, etc.
-DN node	Session control name of the host gateway.
-D? password	User password for host or IDCHECK.

Example: `pthru -li dsa -tm vip7814 -da tss -dn ph13`

Line parameters for TCP/IP

-LI TCP	Use TCP/IP
-AM Telnet/TNVIP	Telnet is default. TNVIP for TNVIP server
-HO hostname	Remote host name. Numeric/symbolic IP-address
-RES mailboxname	Resource name for TNVIP
-RP remote_port	Non-standard remote port for connection
-TM VIP7804	Terminal type, must be a synchronous type.

Example: `pthru -li tcp -tm vip7814 -am tnvip`

Terminal line parameters

Only a restricted set of parameters may be used on the terminal side. They are introduced with the `-TERM` parameter.

<code>-D_ on/OFF</code>	Data trace in Host Links debug structure
<code>-EB on/OFF</code>	Add ETB to send data when enclosure = e_message. Automatically turned on for DKU terminal modes (<i>Glink only</i>)
<code>-EX on/OFF</code>	Add ETX to send data when enclosure > e_message. Automatically turned on for DKU and 3270 terminal modes (<i>Glink only</i>).
<code>-NX on/OFF</code>	Disable IXON/IOFF. Automatically turned on for DKU and 3270 terminal modes (<i>Glink only</i>).
<code>-S_ on/off</code>	Session trace of internal events and low level data.
<code>-ST XXXXX</code>	stty options.



Troubleshooting

If you experience any kind of problem when using an emulator or gateway to access your host application, the product trace file and/or the line handler trace file will provide useful documentation of the problem, for your own use, to the G&R distributor or to G&R if it turns out to be caused by an error in the product. See the appendix *Host Link Trace* for a full discussion of how to generate G&R/Host Links trace files.

Product trace files

```
UNIX/Linux • /usr/gar/debug/XXX/YYY.dbg••
XXX = user name
YYY = product identifier g32, g52, qsi, v78, pth
```

This traces details from internal processing. Enable it by adding `-DBG` to the start-up command or the `<product>.cfg` configuration file:

```
-USER
      -DBG ON
```

Line handler trace files

```
UNIX/Linux • /usr/gar/debug/XXX/YYY-gli.dbg••
XXX = user name
YYY = product identifier g32, g52, qsi, v78, pth
```

This traces details of line handler operation. Enable it by adding one or both of `-D_` and `-S_` to the start-up command or the `<product>.cfg` configuration file:

```
-LI ZZZ
      -S_ -D_
(ZZZ =line handler identification, i.e. DSA, DIWS, TCP or X25)
```

When connecting through Ggate

UNIX/Linux • /usr/gar/debug/**ZZZZ**/gga**NN**-

PPPP.dbg•• Windows• C:\gar\debug**ZZZZ**\gga**NN**-**PPPP**.dbg••

(**ZZZZ** = DSA node name, e.g. EN06 or PH13)

(**NN** = Instance number, starting at 01)

(**PPPP** = IP-address of the client system, running the emulator)

When any G&R or customer application based on GLAPI connects through Ggate to the host application, the line handler trace will be generated on the Ggate system, with the name and location showed in the table above. In this case the product start-up command or <product>.cfg file would look like this:

```
-LI YYY:PPPP
    -S_ -D_
```

(**YYY** = line handler identification, i.e. DSA or DIWS)

(**PPPP** = IP-address of the system running Ggate)

The TTY line handler

You can obtain a line trace of the terminal side of Pthru by using -TERM to introduce parameters for the terminal side:

```
-TERM
    -S_ -D_
```

Appendix: Host Links Manuals

Below you find a complete list of all available Host Links manuals:

Installation	
Host Links Servers	Installation and Configuration on UNIX/Linux
Host Links Emulators	Installation and Configuration on UNIX/Linux
Host Links	Installation and Configuration on Windows
Line handling	
Gline	Line Handler and DSA/OSI Configuration
Ggate	Transparent Gateway
Gproxy	Network Manager & SNMP Proxy Agent
G&R SSL	Using SSL for security in G&R products
GI-API	Application Programming Interfaces
Emulations	
Gspool	Network Printer Emulation
GUFT	Unified File Transfer
G3270	Emulating IBM 3270 Terminals
G5250	Emulating IBM 5250 Terminals
Pthru	Gateway to the Bull Primary Network
Qsim	Emulating Questar DKU7107-7211 & VIP7700-7760
V78sim	Emulating VIP7801 & VIP7814
Gweb	Web Browser Front-end for DKU, VIP7700-7760, VIP7800, IBM3270 and IBM5250 Emulations



Appendix: Host Links License Keys

All G&R products require a license key to run. If you are a G&R distributor you need a license key from G&R. If you are a customer you should have received the license keys from your distributor together with the software. The licenses are stored in text format in a file named `licenses`.

If `licenses` is delivered with the product files, it is merged with any existing licenses in the configuration directory when you run the install procedure.

UNIX/Linux	<code>/usr/gar/config/licenses</code>
Windows server	<code>C:\gar\config\licenses</code>

Glicense

The `Glicense` program is included in every software delivery, and it can be used even though no license key is installed. This allows you to create or modify your own licenses from a license card. You must execute `Glicense` from a user-id that has permission to write in the configuration directory (i.e. the Host Links administration user `gar` for Host Links). When executed with no parameters, `Glicense` will check for an existing `licenses` file. If found it will skip directly to the command dialog, but if there is no license then it will prompt you for distributor name, customer name and the main license key. Be careful to type the names and the key exactly as given to you by your distributor. It is important that you respect case and spaces between words.

To tell `Glicense` explicitly where the license file is, or where it should be written, supply the full path as an option. For example:

```
glicense /usr/gar/config/licenses
```

Enter the license information, text and keys, exactly as specified on the supplied license card.

Once the first time installation has been done, you can simply run `Glicense` without any options and it will automatically find the `licenses` file.

When started `Glicense` gives you the following prompt:

```
Enter command or '?':
```

If you enter '?' a list of the available commands is returned:

Use these commands to define/modify and save the `licenses` file.

A = Add	Add a new product to the license file.
D = Delete	Delete a product from the license file.
R = Read	Read in a new license file.
M = Merge	Merge in license keys from a license file
W = Write	Save the license file.
P = Print	Display a list of configured products.
N = New	Create a new license file.
H = Hardware	Change the hardware platform
X = eXpiration	Define an expiration date for all products.
V = Version	Set new version for all products
Q = Quit	Quit the <code>Glicense</code> program.
ENTER	The ENTER key quits <code>Glicense</code>

If you enter the Print command, the result will be something like this:

```
Enter command or '?': p
Distributor: Bull A/S    Customer: Arbeidsdirektoratet
Product: Basic
Product: Gline
Product: Ggate
Product: Gspool
Product: Qsim
```

License keys

Below you find a complete list of all Host Links and Glink for Java license keys:

License key	Products that require this key
basic	All products.
ggate	Ggate.
gspool	Gspool.
guft	GUFT server.
Guftc	GUFT client.
gproxy	Gproxy.
qsim	Qsim.
v78sim	V78sim.
g3270	G3270.
g5250	G5250.
pthru	Pthru.
sdkgapi	GI-API SDK.
Glapi	GI-API run-time.
Telnet	Enable Ggate Telnet support
Tnvip	Enable Ggate TNVIP support
ssl	Enables SSL support
Marben	Marben OSI Stack for Windows NT 4
Marben2K	Marben OSI Stack for Windows 2000
MarbenXP	Marben OSI Stack for Windows XP
Marben03	Marben OSI Stack for Windows 2003
Gweb	Gweb Professional Edition All terminal emulations
Gljopen	Glink for Java Open (VTnnn/ANSI/Minitel).
Gljpro	Glink for Java Professional Edition.



License key	Products that require this key
Gljent	Glink for Java Enterprise Edition.
Gljall	Glink for Java All terminal emulations.
Gljsa	Glink for Java Standalone (No configuration server).
Gljsrv	Glink for Java Server (Configuration and License).
Gljcnx	Glink for Java Gconnect (J2EE connector)
Gljdsa	Glink for Java DGA (native DSA comms stack)
Gljggen	Glink for Java Gargen

Appendix: Host Links DSA Utilities

The Gline package includes a set of Gline communication utilities. These are used when testing and debugging connection problems. The utilities are delivered as part of the Gline package and can be used without any additional configuration. The nodes to be tested must of course be configured in the `dsa.cfg` file.

Gcname

Lists the parameters generated from a given CONAME. The utility works for both CONAME and RESOURCE e.g.:

```
gcname tnviptm

Checking 'dsa.cfg' for coname 'tnviptm'
Coname: tnviptm, type TM, parameters:
-DA misfld
-S_
-D_
-CODE 0000
-CODE 1000
-CODE 1800
-TEXT Remote SCID?:
-CODE 4700
-TEXT Remote application?:
-CODE 1400
-CODE 1600
-TEXT Password?:
```

Gerror

Shows the text message associated with a DSA reason code. Only the most common codes are supported i.e. the ones related to network, transport and session communication layers. Errors generated by the OSI-stack on the Host Links platform are not covered by this utility; please refer to the documentation from the vendor of the stack e.g.:

```
gerror 0109
Reporting component: Session control (01) 0109, Dialog
protocol error or negotiation failed (wrong logical
record).
```

For a detailed description of all reason codes, please consult the Bull manual *OSI/DSA Network System Messages and Return codes* (39A2 26DM).

Glnode

List and verify the communications parameters of the local node e.g.:

```
glnode
Local node name : GRDL
Local session control id : GRDL
DSA200 address (area:tsm): 54:60 (36:3C)
```

Gmacfix

When you connect to FCP cards on Bull mainframes via an Ethernet port on the LAN-Extender the mainframe address is given in Ethernet (LLC) format. If you connect to an FDDI adapter you must convert the MAC address to SMT. e.g.:

```
gmacfix 080038000fab
MAC address 080038000fab = 10001c00f0d5
```

Gping

Connects to a remote system using the Gline parameters set on the command line. If successful it returns 'connected to application', otherwise it shows the error code returned e.g.:

```
gping -li dsa -dn b7dl -da iof -du jim -pw mydogsname
Gping - $$DSA: Connected to application
```

Grnode

Return the parameters (in dsa.cfg) and the state of a remote node e.g.:

```
grnode b6dl
Checking 'dsa.cfg' for node 'b6dl'
Session control id : B6DL
DSA200 address (area:tsm) : 1:5 (1:5)
Inactivity interval : 0
Route 0
Load balance percentage : 0
TP class : 2
TP expedited : 0
TPDU size : 0
Network address : 130405
```

Gtrace

Same as gping but writes the DSA/DIWS communication trace on the user's terminal (applicable to UNIX versions) e.g.:

```
gtrace -li dsa -dn ln40 -da snm151
D6:Application event @ 14:17:17.6003. tokenitem = 00
D6:Application event @ 14:17:17.6082. tokenitem = 00
D6:Connect request called, node = LN40
D6:OurBufferSizes. ApplMaxXmit = 511, ApplMaxRecv = 500
Rec:4000 0002 s:2
Rec:506B 0010 s:16
etc etc
Gtrace - line trace ending.
Gtrace - $$DSA: Connected to application.
```

Gtsupd

Update the state of a transport route. Transport routes can be set automatically in a disabled state if a backup route is configured. When such a state change occurs the route will be set back to the enabled state after a configurable timer has expired. The default is 15 minutes. You can reset the state of such a route with the `gtsupd` utility e.g.:

```
gtsupd hipp -st enbl
TS-entry 'hipp' updated OK. Old state = LOCK, new state =
ENBL
```

Appendix: Host Links Trace

If you experience any kind of problem when using a Host Links application, the application trace file and/or the line handler trace file will provide useful documentation of the problem.

Trace activation

The Host Links products automatically create sub-directories in the debug directory when debug is activated: at product level using the `-dbg` parameter, or at line level using the `-d_` or `-s_` parameters to the line module.

Windows server	<code>gspool -id gs1 -dbg -ps \\SERVER\LEXMARK -li dsa -da tptst -d_ on</code>
UNIX Linux	<code>gspool -id gs1 -dbg-pc lp -li dsa -da tptst -d_ on</code>

Most G&R products include a facility for setting product or line parameters dynamically. It is therefore generally possible to turn on debug or trace without modifying the command line or configuration of a production system.

Trace types

All Host Links products accept a parameter `-dbg`, which starts an application level trace of internal events. This is useful when investigating malfunctions or looking closely at product behaviour.

All Gline line handlers accept a parameter `-d_` to turn on a data trace. It records data and enclosure level being exchanged with the line handler. It is useful when documenting product malfunction e.g. an emulation error, because it records exactly what the host sends and what the G&R application replies. It can be used to simulate a customer situation, reproduce a problem and to verify that a correction fixes the documented problem.

All Gline line handlers accept a parameter `-s_` to turn on a session trace. It records the raw data being exchanged between the line module and the underlying transport layer (e.g. OSI Transport, or TCP socket), as well as internal events and protocol states. It is useful when investigating protocol failures such as unsuccessful connect attempts or abnormal disconnections.

Structure

The Host Links file structure includes a debug directory to collect the trace and debug files in one location where the permissions can be adjusted as required for security. By default only the Host Links administrator can access the directory. The debug directory is created by the initialization procedure and located (by default) in:

Windows server	<code>\gar\debug</code>
UNIX Linux	<code>/usr/gar/debug</code>

If the application is a client type of application, a debug sub-directory with the same name as the user (UNIX username or PC login name) is created and all debug files are located there. This includes the line level trace except in the special case where the client application connects via Ggate and the line level trace is written on the Ggate system using the Ggate DSA node name as a debug sub-directory.

If the application is a server type of application, then a sub-directory will be created using the DSA node name on behalf of which the server application is executing. If the server does not use DSA the default local session control name is still used if there is a `dsa.cfg` file. If there is no `dsa.cfg` file then the system's UNIX or Windows communications node name is used. You can find this name using the command `uname -n` on UNIX systems, or the Network section of the control panel on Windows systems. This covers situations where several instances of a server are executing on the same system and accepting incoming calls to different DSA node names, or where several Host Links systems using the same server product share a file system.

Tracing Ggate

When Glink, a Host Links client or a customer application based on GIAPI connects through Ggate to the application, the line handler trace is generated on the Ggate system, with the name and location shown in the table:

Windows server	<code>\gar\debug\NODE\ggaNN-PPPP.dbg</code>
UNIX Linux	<code>/usr/gar/debug/NODE/ggaNN-PPPP.dbg</code>

NODE is the local DSA node name used by the Ggate system.

The trace file name consists of the prefix `ggaNN-` followed by the IP-address of the client, suffixed by `.dbg` for a terminal session or `-dbg` for a printer session. The following is a trace file name for Ggate session sequence number 5 executing on Host Links system GRDL initiated from a Glink client on IP-address `jim.gar.no`:

```
gga05-jim.gar.no.dbg
```

This file, and possibly also a Glink debug file and a Glink communication trace file activated by the `/J` command line parameter will be needed by the support engineer investigating any problem.

To enable a line handler trace through Ggate the product's start-up command or configuration file would look like this:

```
-LI YYY:ZZZZ -S_ -D_
```

(*YYY = line handler identification, i.e. DSA or DIWS*)
 (*ZZZZ = IP-address of the system running Ggate*)

Examples - G&R products

Examples of directory and file names in the debug structure are:

<code>/usr/gar/debug/jim</code>	Debug directory for user 'jim'	
<code>qsm.dbg</code>	Qsim emulator debug file	<code>-dbg</code>

qsm-gli.dbg	Qsim host line trace	-li dsa -s_
pth-glit.dbg	Pthru terminal line trace	-term -s_
pth-glih.dbg	Pthru -host line trace	-li dsa -s_
g32.dbg	G3270 emulator debug file	-dbg
g32-gli.dbg	G3270 host line trace	-s_
/usr/gar/debug/mike	Debug directory for user 'mike'	
v78.dbg	V78sim emulator debug file	-dbg
v78-gli.dbg	V78sim host line trace	-li dsa -s_
guf.dbg	GUFT client debug file	-dbg
guf-gli.dbg	GUFT client host line trace	-li dsa -s_
/usr/gar/debug/en01	Debug directory for node 'en01'	
guf.def	GUFT server debug file	-dbg
guf-gli.def	GUFT server host line trace	-li dsa -s_
gli-gli.dsa	DSA listener host line trace	-s_
gli-gli.diw	DIWS listener host line trace	-s_
gsp.def	Gspool (default -id) debug file	-dbg
gsp-gli.def	Gspool (default -id) host trace	-li dsa -s_
gga01-mike.gar.no.dbg	Ggate line trace, first Glink	-s_
gga02-mike.gar.no.dbg	Ggate line trace second Glink	-s_
/usr/gar/debug/en02	Debug directory for node 'en02'	
gsp.abc	Gspool (-id abc) debug file	-dbg
gsp-gli.abc	Gspool (-id abc) host trace	-li dsa -s_
gspc-gli.def	Gspool DPF8 command trace	-li tcp -s_

gspd-gli.def	Gspool DPS8 data trace	-li tcp -s_
gsp._00	Gspool started on demand debug	-dbg
gsp-gli._00	Gspool started on demand trace	-li dsa -s_

CPI-C and Gweb trace files

Gweb uses the CPI-C libraries so the Gweb debug structure is exactly the same as for CPI-C, except that Gweb inserts its own product identifier into the file name structure. CPI-C applications use the 'client' style of debug and create a debug directory with the UNIX username or PC login name used by the process that started them.

The application level debug (-dbg) and line trace (-s_ and -d_) are set in the `cpic.cfg` file. The line trace goes to the debug directory, with the name built up as follows:

```
<product_id><session_id>-<process_id>.<debug_type>
```

product_id	Value	Comment
	cpi	CPI-C API
	cp3	CPI-C 3270
	cp7	CPI-C 7800
	cpd	CPI-C DKU
	gw3	Gweb3270
	gw7	Gweb7800
	gwd	Gwebdku
session_id	(nn)	If multi-session application, 1-63
process_id	n (n n n...)	Varies by platform
debug_type	dgb	Application level debug
	gli	Line trace

Example:

\gar\debug\system		debug directory for user "system"
cpi-16.dbg	CPI-C single session debug	-dbg
cpi-16.gli	CPI-C single session line trace	-li dsa -s_
cpi2-123.dbg	CPI-C session 2 application debug	-dbg
gw7-20172.gli	Gweb7800 host line trace	-li dsa -s_

Appendix: Error codes

OSI/DSA error codes

Below is a list of OSI/DSA error codes and the corresponding description. These are the same descriptions that the G&R/Gerror utility will display when given the DSA code as a parameter.

code	Description
00xx	General Errors
0001	Open Failure in LC - Reject for unknown reason
0002	Open Failure in LC - Acceptor customer node inoperable
0003	Open Failure in LC - Acceptor customer node saturated.
0004	Open Failure in LC - Acceptor mailbox unknown.
0005	Open Failure in LC - Acceptor mailbox inoperable.
0006	Open Failure in LC - Acceptor mailbox saturated.
0007	Open Failure in LC - Acceptor application program saturated
0008	Connection refused. Transport protocol error or negotiation failed.
0009	Open Failure in LC - Dialog protocol error or negotiation failed
000A	Open Failure in LC - Presentation protocol error or negotiation failed
000B	Open Failure in LC / Connection refused lack of system resources
000C	Open Failure in LC / Connection refused from GCOS7 duplicate user
000D	Open Failure in LC, Duplicate implicit LID / Q class not started
000E	Open Failure in LC, Duplicate GRTS Id / lack of memory resources
000F	Open Failure in LC, No Logical line declared for DACQ / 7 connection refused
0010	Open Failure in LC, GCOS 8 GW Missing translation / Incorrect device length in ILCRL.
0011	Open Failure in LC, DAC connection not initialized / Too many jobs executing
0012	Open Failure in LC, No binary transfer / impossible to start the IOF job

0013	Open Failure in LC, connection is not negotiated in FD mode / impossible to start the IOF job
0014	Disconnection - Timeout resulting from absence of traffic.
0016	Option missing for an RBF mailbox.
0017	Connection refused - Incorrect access right for MB.
0018	Connection refused - Incorrect access rights for the application.
0019	Connection refused - Unknown pre-negotiated message path
001A	Connection refused - Security validation failed.
001B	Connection refused - Unknown acceptor mailbox extension.
001C	Connection refused - Inoperable acceptor mailbox extension.
001D	Connection refused - Invalid Message group number.
001F	Disconnection - no more memory space.
0020	Connection refused - Unknown node.
0021	Connection refused - inaccessible node or Host down.
0022	Connection refused - saturated site.
0023	Connection refused - inoperable mailbox.
0024	(X.25) Packet too long. Problem with packet size. / Connection block already used.
0030	Syntax Error - option not known (received on close VC).
0031	(X.25) No response to call request packet - timer expired.
0033	(X.25) Timer expired for reset or clear indication.
0039	Disconnection - transport protocol error (MUX).
003C	Presentation Control Protocol Error
003E	The application has not the turn
003F	Message group closed
0040	(X.25) Facility code not allowed. / Connection refused - unknown node
0041	Connection refused - path not available.
0042	Connection refused - Duplicate USER ID / Facility parameter not allowed
0044	(X.25) Invalid calling address.
0045	(X.25) Invalid facility length.
0047	(X.25) No logical channel available.
004F	DNSC: (X.25) Invalid call packet length.
0050	Normal disconnection (GCOS3/8)
0051	Error or Event on LC initiated by GW
0052	Error or Event on LC initiated by GW.
0053	Error or Event on LC initiated by GW. TCall
0054	Error or Event on LC initiated by GW. DIA in LOCK State
0055	Error or Event on LC initiated by GW. DIA error

0056	Error or Event on LC initiated by GW. GW has no known explanation.
0057	Error or Event on LC initiated by GW. Reject mailbox permanent
0058	Error or Event on LC initiated by GW. No more input lines in DACQ
0059	Time-out on GCOS 3/8 gateway.
005A	Error or Event on LC initiated by GW. Disconnect from terminal without reason
005B	Error or Event on LC initiated by GW. Wrong letter or wrong record
005C	Error or Event on LC initiated by GW. Forbidden letter received
005D	Error or Event on LC initiated by GW. Forbidden letter received
005E	Error or Event on LC initiated by GW. No buffer for secondary letter
005F	Error or Event on LC initiated by GW. No buffer for fragmented letter
0060	Error or Event on LC initiated by GW. Disconnect on end of phase record
0061	Error or event on LC initiated by GW. No buffer for control letter.
0062	Error or event on LC initiated by GW. Mailbox in closing phase
0064	Error or event on LC initiated by GW. Flow control error.
0065	Error or event on LC initiated by GW. CH locked by operator.
0066	Error or event on LC initiated by GW. Disconnect with a normal TMG F2 exchange.
0067	Error or event on LC initiated by GW. Teletel rerouting error from DACQ
0068	Error or event on LC initiated by GW. Teletel routing error from DACQ
0069	Error or event on LC initiated by GW. Teletel rerouting error from TM
006A	Error or event on LC initiated by GW. Teletel rerouting error from TM
006B	Syntax error - text too long.
006C	Syntax error - illegal object in a GA command.
006D	Syntax error - unknown node Id.
0078	Syntax error - illegal command for this object.
0079	Syntax error - illegal date.
007F	(X.25) No route available for X.25 switching.
0081	No more network routes available for switching.
0082	(X.25) Hop count reached for X.25 switching.
0083	(X.25) Flow control negotiation error.
0085	(X.25) Frame level disconnection.
0086	(X.25) Frame level connection.

0087	(X.25) Frame level reset.
0090	Frame level not set.
0092	(X.25) X.25 Echo service in use.
0093	(X.25) Incorrect password for PAD connection.
0094	(X.25) No more PAD connections allowed.
0096	(X.25) TS SX25 or NU X25 objects locked.
009C	(X.25) Invalid packet header. X.25 protocol error.
009D	(X.25) Incompatible header. X.25 protocol error.
009E	(X.25) Logical Channel Number too high.
009F	(X.25) Incorrect packet type.
00B2	Use of invalid password through PAD
00B6	Unknown mailbox selection for PAD connection using the PAD password.
00C0	(X.25) Normal disconnection.
00D7	(X.25) TS image (of type DSA or DIWS) in LOCK state.
00DE	(X.25) NS RMT or NR SW in LOCK state.
00E1	Connection refused. Mailbox is not in ENBL state.
00E6	QOS not available permanently.
01xx	Session Control
0100	Logical connection accepted or normal termination
0101	Rejection for unknown reason or abnormal termination
0102	Acceptor node inoperable.
0103	Acceptor node saturated. When a node has no available resources
0104	Acceptor mailbox unknown.
0105	Acceptor mailbox inoperable.
0106	DNS: Acceptor mailbox saturated.
0107	DNS: Acceptor application program saturated.
0108	Transport protocol error or negotiation failed (DSA 200 only).
0109	Dialog protocol error or negotiation failed. (Wrong logical record).
010A	Time-out on session initiation / unknown LID
010B	Acceptor mailbox extension unknown.
010C	Acceptor mailbox extension inoperable.
010D	Invalid Session Number.
010E	Unknown node.
010F	System error. System generation error or insufficient memory space
0110	Application abnormal termination. Subsequent to an abnormal occurrence in the dialogue
0111	Normal terminate rejected.
0112	Protocol not supported.
0113	Session control service purged by user.
0115	Disconnection Time-out on message group initiation.

0117	Incorrect Access Right for MB
0118	Incorrect Access Right for the Application
0119	Pre-negotiated Message Path Descriptor unknown
011A	Security validation failed
011E	Incorrect object status
011F	Not enough memory space available.
0120	Node unknown.
0121	The channel object (CH) is in LOCK state
0122	Saturation - no plug available
0123	Object status = LOCK
0124	Connection block (TSCNX) already used
0125	Disconnection already running
0126	The connection block (TSCNX) is disconnected (or not connected)
0127	Change Credit value < 0
0128	Ineffective Change Credit (delta = 0)
0129	No more deferred letters
012B	"Reinitialization" Request
012C	"Reinitialization" in progress
012D	"Reinitialization" in progress, letters are dropped
012E	Close virtual circuit. Either no mapping exists between PA/NR or CL and VC/NS
012F	Null connection object index.
0130	Undefined function at Sysgen time.
0131	Letter too large with respect to the negotiated size.
0132	The received letter is longer than the size which was
0133	Disconnection of the session control user
0134	Interface error on EOR (End-Of-Record) processing.
013C	Presentation control protocol error.
013E	You do not have the turn.
013F	Message group closed.
0140	Session is closed.
0151	Request refused, no system buffers available.
0152	Incorrect addressing record.
0153	No presentation record in the ILCAL or ILCRL
0154	Negotiation failed on session mode
0156	Negotiation failed on resynchronization.
0157	Negotiation failed on END to END ACK
0158	No presentation record in the connection letter
0159	Negotiation failed on session mode
015A	Negotiation failed on letter size (in the Logical Connection record).

015B	Negotiation failed on resynchronization (in the Logical Connection record).
015C	Negotiation failed on end-to-end ACK (Logical Connection record).
015D	No support of the "letter" interface because Multirecord is not negotiated.
0160	Incorrect TSPACNX table.
0161	Protocol error on letter reception.
0162	Negotiation failure.
0163	Record header length error.
0164	Protocol error.
0165	Protocol error reception of control letter.
0166	Type or length error on interrupt letter.
0167	Protocol error on reception of data letter.
0168	Dialog protocol error.
0169	Unknown event.
016A	Protocol error on data transfer.
016B	Invalid status for a disconnection request.
016C	Invalid status for a recover
016D	Invalid status for a suspend/resume request.
016E	Negotiation failure.
016F	Unknown command.
0170	Error in presentation protocol
0171	Letter header length error in
0172	ILCAL is not DSA 200 protocol.
0173	Error in session record.
0174	Normal disconnection, without complementary reason code.
0175	Letter is not in ASCII or EBCD.
0176	Connection protocol letter header
0177	Letter header protocol error.
0178	Record header protocol error.
0179	Record header length error.
017A	Mbx record header length error.
017B	Error on buffer transfer.
017C	DSA 200 record header protocol
017D	DSA 300 record header protocol
017E	Unsupported connection options.
017F	Character error in ASCII string.
0180	No segmented record size.
0181	Invalid mailbox object index.
0182	Mapping error for a remote connection.
0190	No more buffers.

0191	Byte count is greater than GP.
0192	Byte count is greater than GP.
0193	Byte count is greater than GP.
0194	Byte count is greater than GP.
0195	Byte count is greater than GP.
0196	Byte count is greater than GP.
0197	Byte count is greater than GP.
0198	No more buffers.
0199	Byte count is greater than GP.
019A	Byte count is greater than GP.
019B	Byte count is greater than GP.
019C	Byte count is greater than GP.
019D	Byte count is greater than GP.
019E	Byte count is greater than GP.
019F	Byte count is greater than GP.
01A0	Invalid transfer state.
01A1	Suspend protocol running.
01A2	Suspend protocol running.
01A3	Recover protocol running.
01A4	Forbidden function in write request. (\$WRITE)
01A5	Conflicting parameters for segmented record. (SWBREC)
01A6	Protocol conflict - suspend/recover.
01A7	Protocol not supported - letter/end-to-end ACK. (SWBLET)
01A8	Multi-record letter in progress.
01A9	Interrupt request forbidden.
01AA	Send control record request forbidden. (SCTROL)
01AB	Forbidden for TWA session - turn is here. (SREAD)
01AC	Termination forbidden - suspend or recover in progress. (STERM)
01C0	No space available for downstream connection request. (SMECNX)
01C1	No space available for upstream connection request. (SMUCNX)
01C2	No space available for upstream SCF connection. (SMRCNX)
01C3	No space available for session context. (\$SCTX)
01E0	Enclosure or data length error for a write request. (\$WRITE)
01E1	Enclosure or data length error for a write segment record request. (SWBREC)
01E2	Enclosure error for 'give turn' request. (SGVTRN)
01E3	Interrupt request is not demand turn, attention/data attention, or purge record.
01E4	Input status for a send control letter is not permitted.
01E8	Write request without turn.
01E9	Write segmented record request without turn.

01EA	Write segmented letter request without turn.
01EB	Send control letter request without turn.
01EC	Disconnection request without turn.
02xx	Presentation Control
0201	Protocol level not supported
0202	Application designation protocol error.
0203	Character encoding error. TM cannot support the proposed encoding.
0204	Character set error. TM cannot support the proposed character set.
0205	Character subset error. TM cannot support the proposed character subset.
0206	Incorrect record encoding.
0207	Incorrect parameter encoding.
0230	Data presentation control error. The presentation control proposed for this session cannot be used
0231	Device type is incompatible with the configuration.
0232	TM control protocol is incorrect.
0233	Device-sharing attributes are invalid.
0234	Initiator or acceptor configuration is not correct.
0235	Logical device index error.
0236	Number of logical devices is incompatible with the configuration.
0237	TM protocol record not supported.
03xx	Terminal Management
0300	Sysgen error WARNING. There is no mapped object; some objects will be spare.
0301	Operator requested session abort or logged.
0302	Idle time run out after secondary network failure.
0303	Idle time run out for no traffic.
0304	Form not found.
0305	Operator requested suspension.
0306	Destructive attention send on the session.
0307	Unknown TX addressed in this session. TM is unable to a the session.
030A	Protocol error. A record was received which did not comply with current standards
0310	Insufficient resources. The receiver cannot act on the request because of a temporary
031E	Incorrect value for Retry or Wait parameters on UP LL command.
0320	Function not supported.
0321	Parameter error. This can result
0322	Resource not available. The

0323	Intervention required (on principal device).
0324	Request not executable.
0325	EOI required.
0326	Presentation space altered, request executed.
0327	Presentation space altered, request not executed.
0328	Presentation space integrity lost.
0329	Device busy. The device is busy and cannot execute the request.
032A	Device disconnected.
032B	Resource not configured.
032C	Symbol set not loaded.
032D	Read partition state error.
032E	Page overflow.
0330	Subsidiary device temporarily not available.
0331	Intervention required at subsidiary device.
0332	Request not executable because of subsidiary device.
0340	TM cannot accept a new connection.
0341	Object status incorrect.
0342	The TM configuration is not correct.
0343	Unknown TX addressed on this session.
0344	Data presentation protocol error.
0345	Device type is incompatible with the configuration, or is not supported.
0346	TM control protocol incorrect.
0347	Device shareability attributes are invalid.
0348	Initiator or acceptor configuration is not correct.
0349	Logical device index error.
034A	Number of logical devices incompatible with the configuration.
0350	Disconnection of TM after reinitialization of the network.
0360	File not found. (Welcome and Broadcast Messages)
0361	Site not found. (Welcome and Broadcast Messages)
0362	NASF error. (Welcome and Broadcast Messages)
0370	No-session timeout. Device disconnected.
0371	No-input timeout. Device disconnected.
0372	No-output timeout. Device disconnected.
0373	Timeout due to no backup session being initiated.
0374	Timeout due to no backup session being established.
0375	Connection refused because of late activation of back up session.
0376	Disconnection of current session to switch to backup session.
0380	AUTOCN parameter not declared.
0381	Mixed ETB in data sent by VIP screen and cassette
0382	Data header sent by the terminal incorrect.

0383	Desynchronization in the exchange of data.
0384	KDS block count error.
038C	Remote terminal is not connected
0390	Unknown mailbox.
0391	No call packet to return.
0392	No "Possibility" command to return Protocol error
03C0	Slave device disconnection.
17xx	Network Layer
1701	PAD connection refused.
1702	Flow control error.
1706	Logical channel number not zero in restart packet.
1707	Illegal packet length or use of D-bit forbidden.
1708	Illegal header.
1709	Illegal Logical Channel Number.
1710	Invalid packet type for the automaton state. Protocol error
1711	Incorrect packet type.
1712	Inconsistent network parameters in the generation file.
1713	No more space.
1714	DSAC network layer object not usable.
1717	USED/ENBL transition. Transport station is locked.
1718	USED/ENBL transition. This is a back-up NR.
1719	USED/ENBL transition. Dynamic close due to load.
171A	USED/ENBL transition. Transfer time-out has elapsed.
171B	USED/ENBL transition. This is a back-up NR.
171C	USED/ENBL transition. Transport station is idle.
171E	USED/ENBL transition. NR object is locked.
171F	ENBL/LOCK transition. NR HDLC has no more memory space.
1721	Remote station is inaccessible via the configured network. Check
1723	Incorrect PAD password.
1724	Virtual circuit already in use. LCN (Logical Channel Number) too high.
1725	Invalid virtual circuit.
1726	Packet too short. Protocol error for the equipment directly connected to the Bull Datnet.
1727	Incompatibility between the generation parameters of two communicating systems on window or packet size.
1729	Packet size in communicating systems not the same.
1731	Timer runs out while waiting for call confirmation.
1732	Timer runs out while waiting for clear confirmation.
1733	Timer has run out while waiting a reset confirm.
1740	Call setup or call clearing problem.

1741	Open failure on virtual circuit. No flow control on this NS.
1742	Incorrect facility. Protocol error for the equipment directly connected to the Bull Datanet.
1744	Unknown subscriber.
1745	End of time-out on reset confirm. Invalid facility length. Protocol error for the equipment directly
1747	No logical channel available.
1749	End of time-out on call confirm.
174F	Incorrect packet length. Protocol error for the equipment directly connected to the Bull Datanet.
1755	Flow control, window, packet size or reset error.
1760	Frame disconnection.
1770	Frame connection.
1771	Frame reset.
1781	No more network routes available for X.25 switching.
1782	Maximum of 15 switches have been used,
1783	Flow control negotiation error.
1785	Frame level disconnection.
1786	Frame level connection.
1787	Frame level reset.
1790	Frame level not established.
1791	No more logical paths available for the PAD.
1792	Echo service busy.
1793	Incorrect PAD password.
1794	All the PAD virtual circuits are used
1795	X.25 initialization not possible.
179B	LCN not null in restart packet
179D	Incompatible header (receive error: all VC of concerned NS
179E	LCN greater than NBVC in NS directive
179F	Incorrect packet type
17A0	Invalid facility.
17B0	Normal disconnection.
17B1	X.25 Echo in use.
17B2	No more logical channels available.
17B3	No more PAD connections allowed.
17B4	TS SX25 or NU X25 object locked.
17B5	Buffer capacity overflow.
17B6	Normal disconnection.
17B8	Unknown calling SNPA (Sub-Network Point of Attachment).
17B9	Internet problem.
17CB	Call collision on VC

17CC	Incompatible generations (NR object without mapping).
17CE	Invalid status NR locked.
17CF	Lack of space.
17D0	Unknown subscriber.
17D4	TSCNX already used for another connection. SCF internal error.
17D7	Transport station locked.
17DD	Proper NS locked.
17DE	Invalid status NR locked.
17DF	Lack of space.
17E0	Forbidden parameter or invalid value.
17E1	Invalid transition.
17E2	Upward-mapped object (TS) not locked.
17E3	No object mapped above.
17E4	NR not locked (MP NR -ADD/-SUB) or virtual circuit already open.
17E5	NR is last in list and the TS is not locked.
17E6	No object mapped above (UP NR -PRIO). NR not mapped on TS.
17E7	Upward mapped object not locked
17E9	Mix of datagram and connection network
17EB	Class inconsistent with NR.
17EE	Incompatible generations. NR object without mapping.
17FF	Wrong parameter in administrative CALL
18xx	Transport Layer
1800	Normal disconnection initiated by the correspondent
1801	Local saturation at connection request time.
1802	Failed negotiation at connection time.
1803	Duplicate connection. Two or more requests have been issued for the same connection.
1804	Redundant request.
1805	Retransmission Time-out at transport level.
1806	Survey time-out at transport level.
1807	Transport protocol error.
1808	Session Control specified is not available (inaccessible).
1809	Requested Session Control Id unknown by remote transport.
180A	Termination because of disconnection by administration.
180B	Session Control/Transport interface error.
180C	Connection request on non-sharable VC in case of ISO Transport. ISO: header or parameter length is invalid.
1817	Station in shut-down state.
181F	No memory space at connection time.
1821	Session Control inaccessible by configured session routes. ISO: Session entity not attached to TSAP.

1824	Collision between Close NC and Open TC.
182E	Remote station not configured.
182F	Resource saturation.
1831	ISO: No route for the called NSAP.
1832	ISO: Received NSAP addresses are wrong.
1833	Segmentation violation.
1834	ISO:QOS priority not available temporarily, due to a local condition (for example, lack of resources).
1835	ISO:QOS priority permanently unavailable locally (for example, due to an error in the system generation).
183A	ISO: Remote reason not specified.
183C	ISO: Remote transport entity congestion at connect request time.
1840	Server in terminating state. TC has been re-assigned on another NC.
18A1	An additional NC has been assigned to a TC.
18B0	NC has been re-assigned on another VC.
18EF	Disconnection at Transport level caused by reception of RESTART DSA during the transfer phase.

Windows Sockets error Codes

Below is a list of Windows Sockets return codes and the corresponding description.

Hex code	Windows Sockets Access Error name	Description
2714	WSAEINTR	The (blocking) call was cancelled via WSACancelBlockingCall()
2719	WSAEBADF	The socket descriptor is not valid.
271E	WSAEFAULT	An invalid argument was supplied to the Windows Sockets API.
2726	WSAEINVAL	An invalid call was made to the Windows Sockets API.
2728	WSAEMFILE	No more file descriptors are available.
2733	WSAEWOULDBLOCK	The socket is marked as non-blocking and no connections are present to be accepted.
2734	WSAEINPROGRESS	A blocking Windows Sockets call is in progress.

2735	WSAEALREADY	The asynchronous routine being cancelled has already completed.
2736	WSAENOTSOCK	The descriptor is not a socket.
2737	WSAEDESTADDRREQ	A destination address is required.
2738	WSAEMSGSIZE	The datagram was too large to fit into the specified buffer and was truncated.
2739	WSAEPROTOTYPE	The specified protocol is the wrong type for this socket.
273A	WSAENOPROTOOPT	The option is unknown or unsupported.
273B	WSAEPROTONOSUPPORT	The specified protocol is not supported.
273C	WSAESOCKTNOSUPPORT	The specified socket type is not supported in this address family.
273D	WSAEOPNOTSUPP	The referenced socket is not a type that supports connection-oriented service.
273E	WSAEPFNOSUPPORT	
273F	WSAEAFNOSUPPORT	The specified address family is not supported by this protocol.
2740	WSAEADDRINUSE	The specified address is already in use.
2741	WSAEADDRNOTAVAIL	The specified address is not available from the local machine.
2742	WSAENETDOWN	The Windows Sockets implementation has detected that the network subsystem has failed.
2743	WSAENETUNREACH	The network address can't be reached from this host. There is probably a problem in the way you have set up TCP/IP routing for your PC (most likely you have not defined a default router).
2744	WSAENETRESET	The connection must be reset because the Windows Sockets implementation dropped it.
2745	WSAECONNABORTED	The connection has been closed.
2746	WSAECONNRESET	
2747	WSAENOBUFS	Not enough buffers available, or too many connections.
2748	WSAEISCONN	The socket is already connected.

2749	WSAENOTCONN	The socket is not connected.
274A	WSAESHUTDOWN	The socket has been shutdown.
274B	WSAETOOMANYREFS	
274C	WSAETIMEDOUT	Attempt to connect timed out without establishing a connection.
274D	WSAECONNREFUSED	The attempt to connect was forcefully rejected. The service on the other side is not available.
274E	WSAELOOP	Too many symbolic links were encountered in translating the path name.
274F	WSAENAMETOOLONG	
2750	WSAEHOSTDOWN	The host machine is out of service.
2751	WSAEHOSTUNREACH	The host machine is unreachable.
2752	WSAENOTEMPTY	
2753	WSAEPROCLIM	
2754	WSAEUSERS	
2755	WSAEDQUOT	
2756	WSAESTALE	
2757	WSAEREMOTE	
276B	WSASYSNOTREADY	Indicates that the underlying network subsystem is not ready for network communication.
276C	WSAVERNOTSUPPORTED	The version of Windows Sockets API support requested is not provided by this particular Windows Sockets implementation.
276D	WSANOTINITIALISED	A successful WSASStartup() must occur before using this API.
2AF9	WSAHOST_NOT_FOUND	Authoritative answer host not found.
2AFA	WSATRY_AGAIN	Non-authoritative answer host not found, or SERVERFAIL.
2AFB	WSANO_RECOVERY	Non-recoverable errors, FORMERR, REFUSED, NOTIMP.
2AFC	WSANO_DATA	Valid name, no data record of requested type.